PEINERT 26

Assembly

The Peinert 26 is easily rigged; there are only four removable parts - the seat, the foot stretcher, the rigger arm, and the fin.

Removal and installation of the seat.

If the seat is in the boat, it may be removed by first moving the sliding undercarriage of the seat towards the stern of the boat while holding the seat stationary. Keeping the wheels as far to the stern as possible, pull the stern wheels off the stern end of the tracks. Now, keeping the wheels stationary, move the seat top towards the stern until the retaining clips under the seat are past the end of the tracks, at which point the seat can be lifted straight up.

Installation is the reverse. With the wheels all the way towards the bow end (the one with the depressed center) of the seat, set the bow wheels on the stern end of the track. Now move the seat top towards the bow of the boat, checking to be sure that the seat retaining clips go under the edge of the tracks on both sides. The seat should now be positioned so that the stern pair of wheels are just to the stern of the end of the tracks while the seat top is over the tracks. Push the seat top towards the bow and the wheels will easily go over the stops and onto the tracks.

Removal of the foot stretcher

The foot stretcher is removed by unscrewing the three wing nuts and lifting it out of the boat. Installation is the reverse of removal.

Removing and installing the rigger arm

The rigger arm is removed by taking the nuts off the two U-bolts on the main rigger arm as well as the two nuts at the washbox end of the stern stays. Remove the bolts, pull the stern stays off the bolts and lift the arm out of the boat. I usually put the nuts back on the stern stay bolts and snug them down, put the washers and bolts back on the U-bolts and put them in my pocket for

safekeeping, and fold the stern stays flat to the main arm to make it easier to transport the boat.

Just a thought - most scullers leave their riggers on all the time - the boat may go onto a roof rack without removing the riggers and will certainly fit onto a cartop sling with riggers on. Indeed, with a slightly customized rack two singles can go on a car without removing the riggers.

To install the rigger arm, remove the nuts from the bolts in the washbox for the stern stays. Unfold the stern stays and set the Rigger Rib into the boat. Insert the two U-bolts over the arm and into their holes. Put a washer and then the nut on each end of the U-bolts and tighten until snug. Push the stern stays onto the bolts in the washbox, put the nuts on and tighten down.

That's it. The nuts do not have to be super tight - snug and just a tiny bit more is fine.

Installing and removing the fin

To install the fin you will need a small tube of silicone caulk, sometimes known as bathtub seal. You can install the fin without it; it will not leak, but is more prone to falling out.

First, put a line of the caulk down the middle of the fin slot. (Avoid the ends of the slot or it will be more difficult to remove a broken fin later). Then insert the bow end (pointed end) of the fin into the bow end of the fin slot. Push the fin all the way down into the slot, and then towards the stern to engage the notch in the stern edge of the fin. Wipe up any excess caulk.

To remove the fin, push it towards the bow (may be difficult because of hardened silicone) then pull up a little on the stern of the fin until you can pull it back towards the stern and out.

Carrying and storing

The Peinert 26 is very sturdy. However, it is best not to overstress the skin of the boat where it is not directly supported by the internal frame. In moving or storing the boat avoid putting great pressure on any one point of the flexible parts of the hull or deck.

The Peinert 26 can be picked up in several ways. You may grasp the washbox at the balance point (just ahead of the rigger arms), you can reach under the hull and cradle it at the balance point, or you can use the optional handles or hatch edge and handle. Like all singles, if I need to carry it more than a few steps, I find it easiest to carry upside down, platform resting on the top of my head, one hand holding the washbox in front of me for fore and aft trim, the other hand holding the rigger arm for sideways trim.

Two people may carry the boat, each holding it wherever convenient at their end of the boat.

For any kind of regular or long-term storage the boat should be supported in two places about eight to ten feet apart, which works out to just ahead of and just behind the washbox. Do not store your Peinert 26 supported at the very ends or balanced on the middle.

The two storage points can be padded and contoured wood, straps, or even uncontoured, unpadded wood if you don't mind a dulling of the finish where the boat sits on the rack.

For storage or transport the Peinert 26 can sit on the washbox or on the centerline of the deck or hull anywhere from the bow end of the frame to the stern end of the frame. The bow end of the frame is located at the slight bump in the middle of the deck, the stern end of the frame at the stern end of the fin - you can feel through the deck where the frame ends.

The washbox of the Peinert 26 is more than strong enough for the boat to be transported on your car resting upside down with the washbox on your conventional roof racks. It may be helpful to use some stops on the front crossbar to stop the boat from slewing side to side at speed. Just be sure the racks are securely attached to the car and tie the Peinert 26 to the racks with rope, straps or some other secure method of fastening. The ropes or straps should be tight but not so tight that the hull starts to deform.

Almost all the commercial boat carriers will also satisfactorily carry the Peinert 26.

Care

The gel coat finish of the Peinert 26 is easy to keep clean. A quick wipe after every row will take care of pond scum and pollution, but if you forget or it gets dirty anyway, any mild soap and water will suffice to wash it off.

If you row in salt water, the metal parts will last longer if you can rinse the boat with fresh water after each row. Even stainless steel will rust a little, given the chance.

If the finish becomes dull or so dirty that soap and water are no longer effective, any mild polish will restore the shine.

You can wax the Peinert 26, just like your car, to preserve the finish. To be technically exact, wax will slow the boat down in the water, but it is on the order of a tenth of a percent. Car wax is fine, you don't need marine or fiberglass wax, which is the same stuff but costs twice as much.

The only wear parts are the oarlocks, tracks, wheels and footstrap. Oarlocks, wheels, and tracks should last for thousands of miles, but if they begin to feel rough it is time to replace them. The best maintenance is to keep them clean, especially to keep sand from beach launches out of the tracks. I recommend frequent wipes of the tracks with a cotton rag. Lubrication of these parts is not necessary, although it may help to silence a squeak. WD 40 or any of the "dry" teflon or waxy lubricants work well.

Adjusting

The Peinert 26 is easy to adjust. Stretcher, height, pitch and spread can be quickly set in the field. Additional height adjustment or lateral pitch adjustment is available by returning the rigger arm to Peinert Boat works. The boats are delivered with height, pitch and spread set to reasonably standard values, so if you do not want to get involved in rigging you don't have to.

The stretcher is adjusted by loosening the three wing nuts, lifting the stretcher slightly, moving it to the proper position and retightening the nuts. Be sure the lugs on the stretcher properly engage the notches on the adjusting strips.

Height is adjusted by removing the Allen head bolt at the top of the pin and moving the plastic washers from the top of the oarlock to the bottom or vice versa. Be sure the

Allen bolt is tight or you may lose the oarlock. The rigger arm is bent with the starboard end 1/2" to 3/4" higher than the port end, so the arrangement of height washers should be the same on each side if you want the left over right clearance.

If you cannot achieve enough height adjustment with the plastic washers, you might try putting some metal washers under the pin on the knuckle. If this is still not enough, send the arm back to Peinert Boat works (if you take all the stays and parts off be sure to mark it for port and starboard) and specify how much additional height (or how much less height) you want on each side and I will perform the adjustment and have it on its way back to you the next day at no charge to you. If you are bold and strong you can try bending it yourself, but Peinert Boat works will not be responsible for any problems.

Pitch and spread are set by loosening the nut at the bottom of the pin, which allows you to rotate the pin and slide it in and out. If you do not have a pitchmeter and/or do not know how to measure the spread, best to leave it alone. This nut at the bottom of the pin must be tight to prevent slippage of the pin and knuckle assembly. Pitch can also be set in one degree increments by switching the pitch bushings in the Concept II oarlocks.

<u>Repair</u>

The Peinert 26 is very damage resistant for a racing single and is unlikely to need repairs. For any kind of serious damage it would be best to contact Peinert Boat Works for repair and/or advice.

The gel coat finish of the Peinert 26 may, over time, become scratched. If the scratches are not deep, they can be improved by power buffing or fine wet sanding followed by power or hand buffing. I would suggest that you start with 400 grit wet or dry paper, then 600 grit, then buffing. The gel coat is not as thick as that on larger and heavier boats, so care must be used not to sand through to the Kevlar (which is a yellow color).

Collisions or abuse may result in holes or slight "creases" in the boat. If not large, you can cover them with waterproof mending tape and continue to use the boat. Repair involves some knowledge of fiberglass work, Peinert Boat Works will be happy to assist with materials and advice.